




Sony Walkman NWZ-E438 Screen Replacement

This guide walks you through how to replace a broken screen.

Written By: Cheryl Zinn

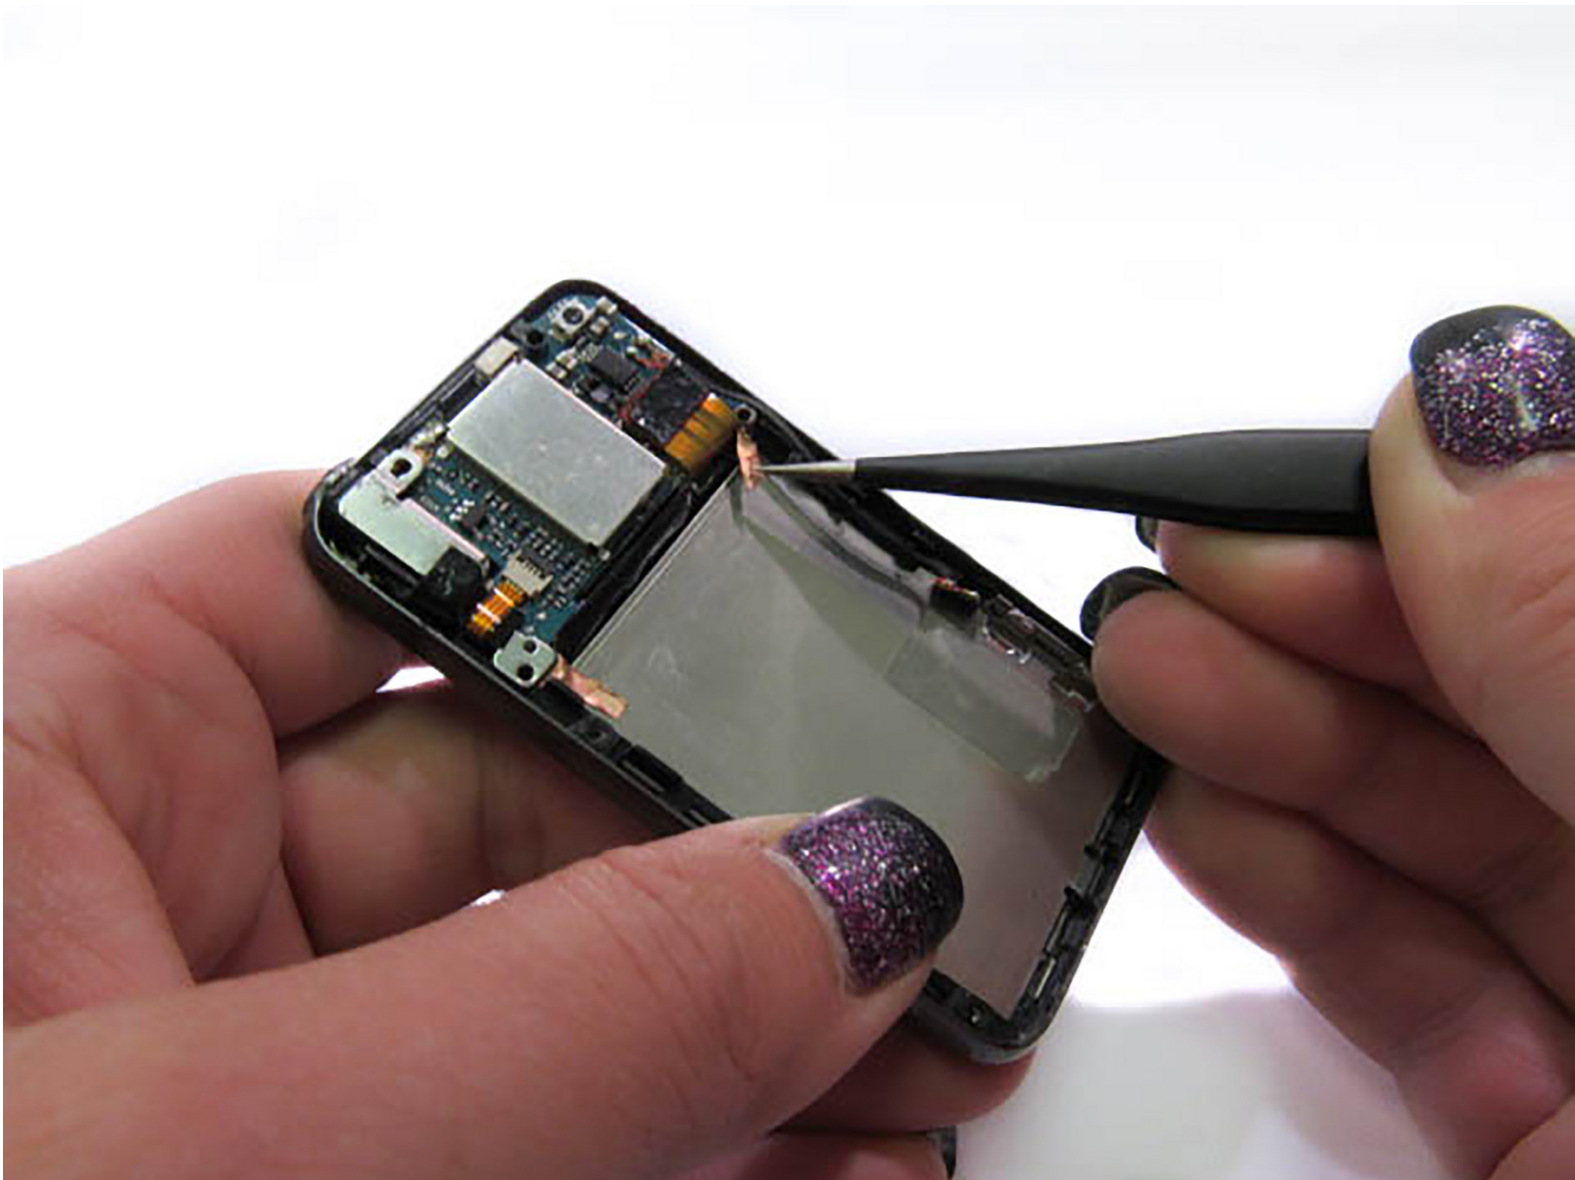

INTRODUCTION

Follow this guide to replace a cracked or broken screen on you Sony Walkman NWZ-E438.



TOOLS:

- [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembling Sony Walkman NWZ-E438




- Unscrew the 2 screws in the back of the device using the Phillips PH000 screwdriver.
- ❗ This will be the only screwdriver you will need throughout the replacement guide(s).

Step 2



- Using a small plastic prying tool, carefully pry off the back of the device.

Step 3 — Screen

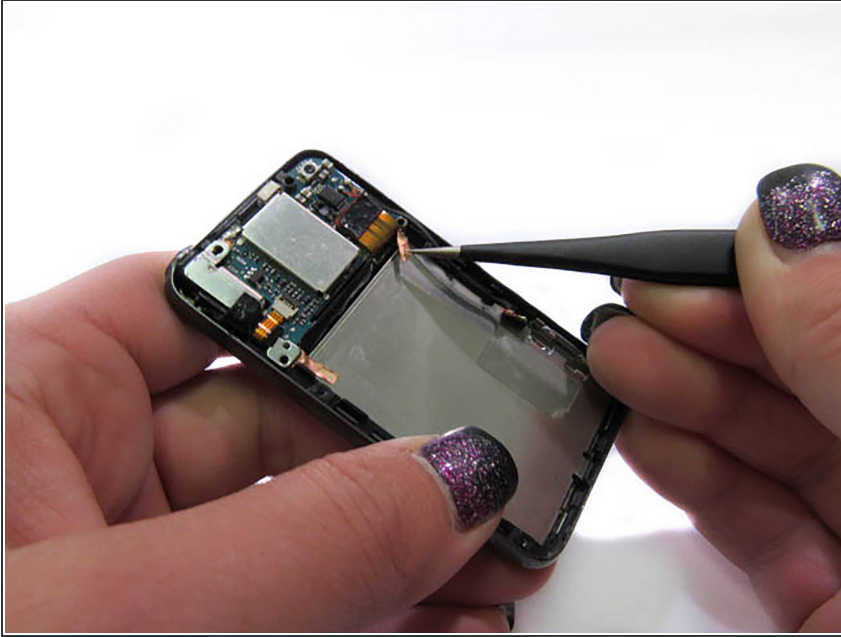

- Pull up the 2 copper strips connecting the outside of the device to the inside of the device.

Step 4




- Using the small, plastic prying tool wedge it between the bottom of the frame and the outer frame.
- Slowly circle the device, popping the outside of the frame off.

Step 5



- To remove the screen, use the fine point tweezers and lift up on the metal piece at the bottom of the frame.

Step 6

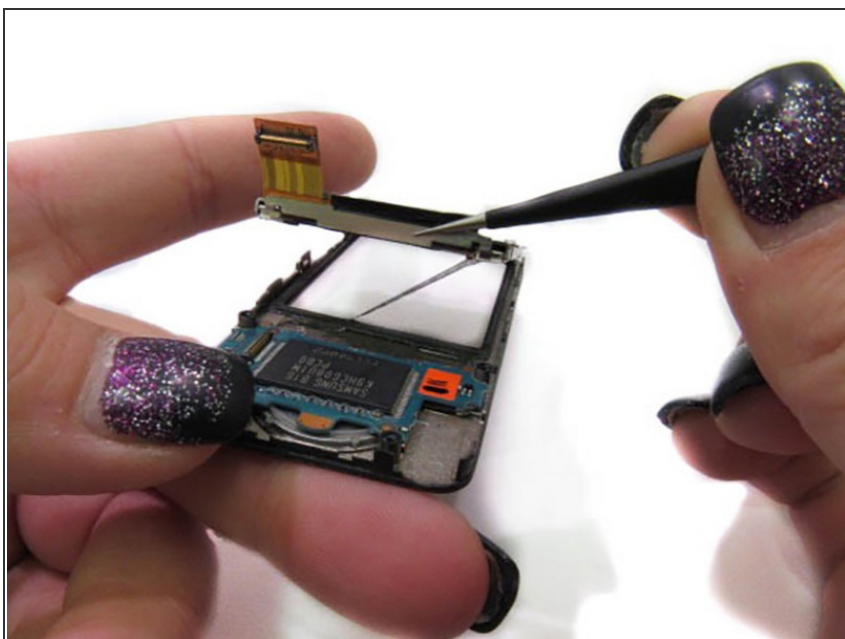

- To remove screen from metal backing, use fine point tweezers to go in between the screen and metal backing and slowly pull them apart.

Step 7



- The screen will be removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:05:09 PM.